



## **Van & Truck Cargo System**

Vantech USA [www.vantech.com](http://www.vantech.com)



### **PRODUCT INFO**


---

Part #: H3230B  
System: H3 Series  
Material: Aluminum  
Fitment: Ford Econoline 1992-2013  
Color: Black

### **REQUIRED TOOLS**













---

3/16" Allen Key Wrench








1/2" Wrench



PART #	DESCRIPTION	QTY	ITEM ITEM NOT DRAWN TO SCALE
S052	DOUBLE SLIDER 2" BOLT TO BOLT	6	
W008	5/16" X 3/4" WASHER	24	
B016	5/16" X 1 1/4" CARRIAGE BOLT	12	
B166	5/16" X 1" COUNTERSUNK BOLT	12	
N005	5/16" NYLON NUT	24	
H11	DRIP RAIL CLAMP	6	
H18	MOUNTING BASE (LOW)	2	
H19	MOUNTING BASE (STANDARD)	4	
A286-65	3" X 1.5" X 65" CROSS BAR	3	
BG565	65" RUBBER BAR GUARD	3	
A286-C	PLASTIC ENDCAP	6	
BG908	RUBBER SEAT	6	




## RUBBER BAR GUARD

- Press the rubber bar guard into the channels of cross bars

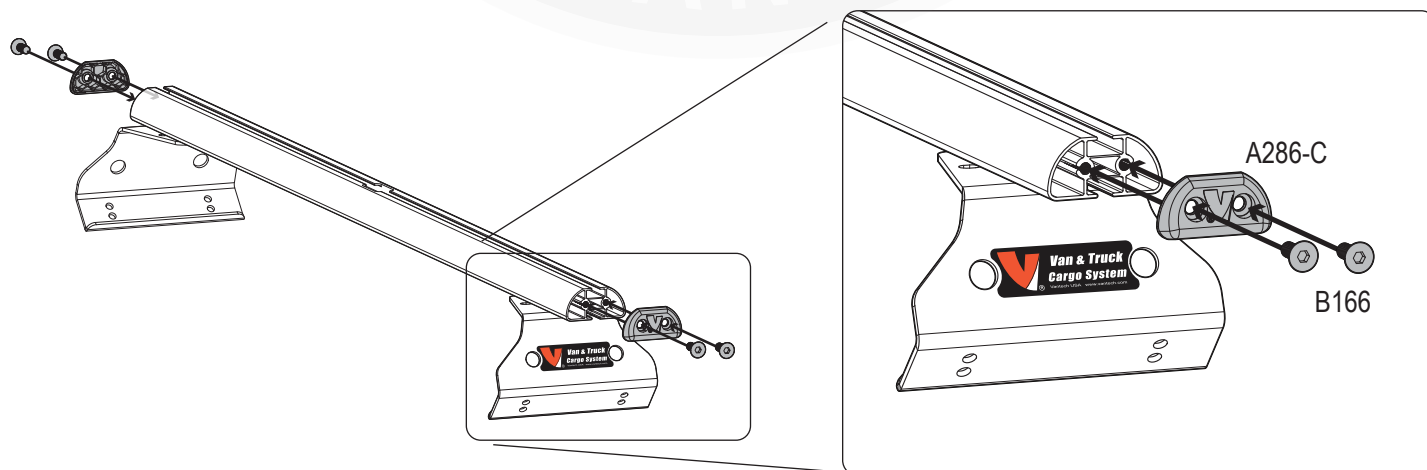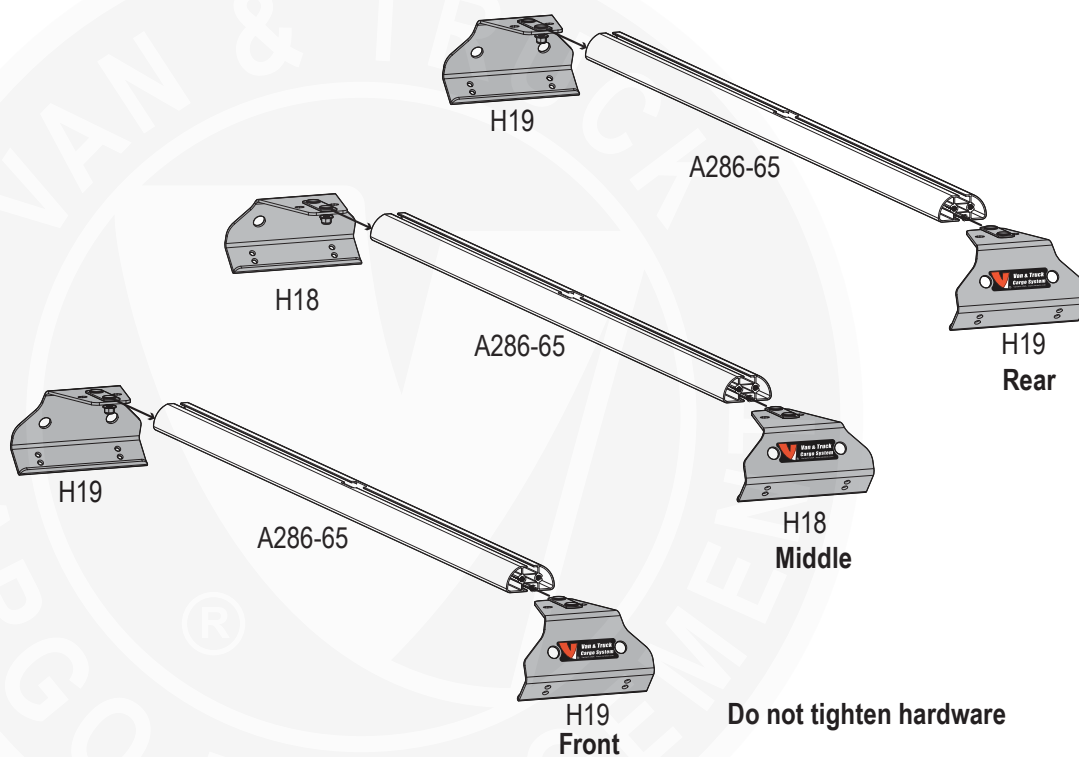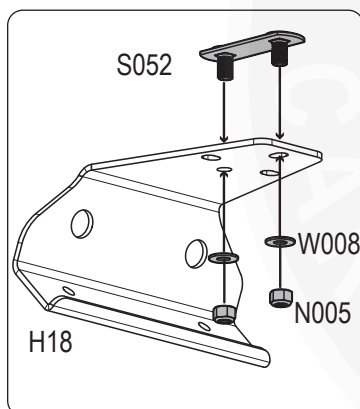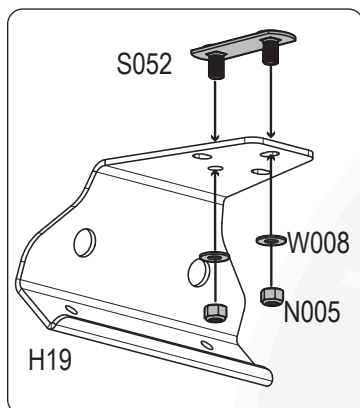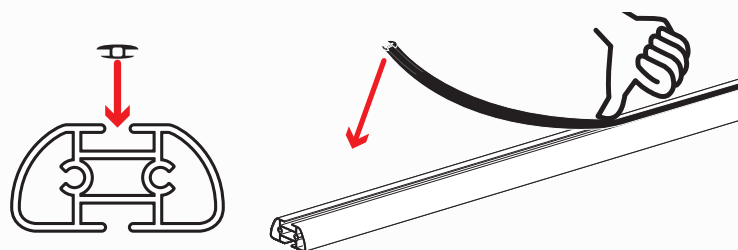

## Rubber Seats for Upright Mounts

- Slide the Rubber Seats onto the bottom of the Upright Mounts.
- These prevent metal on metal contact for vehicles without a protective layer on their drip rail.

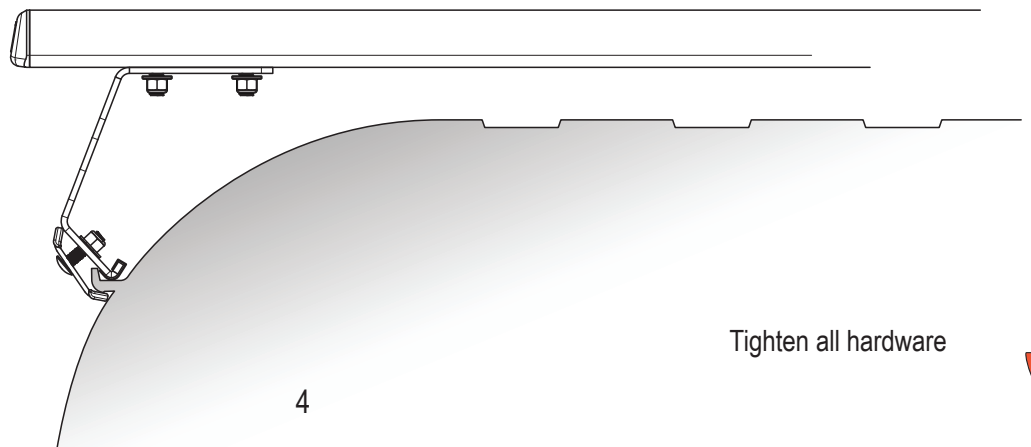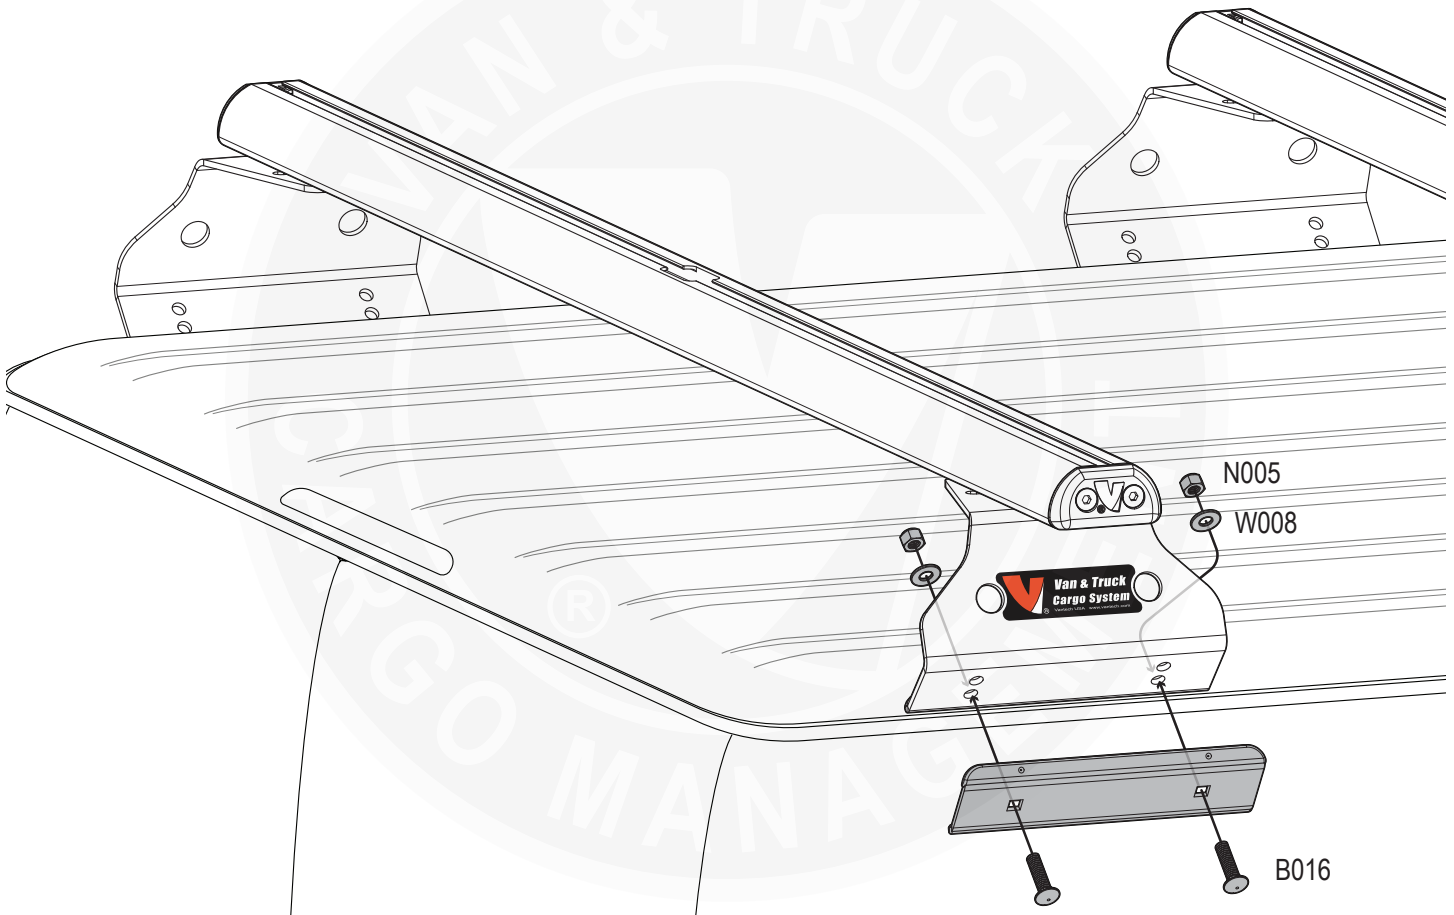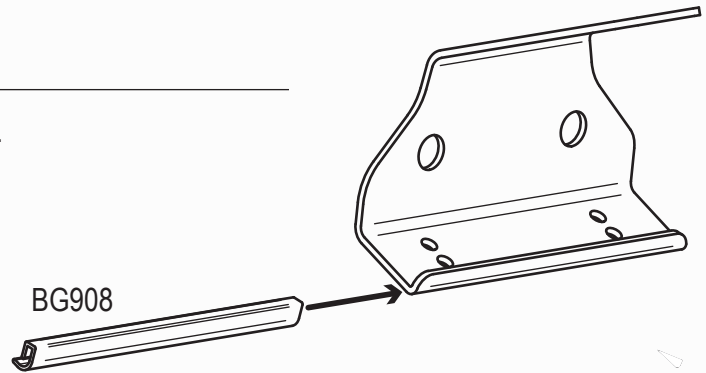

Tighten all hardware