

LEGEND FLEET SOLUTIONS

MERCEDES SPRINTER

Wheel Well Covers

Kit Number : 1-WWC-11

INSTALLATION INSTRUCTIONS



Parts & Hardware Required:

- 1. Driver Side's Wheel Well Cover (Qty=1) (Black Colored and Insulated)
- 2. Passenger Side's Wheel Well Cover (Qty=1) (Black Colored and Insulated)
- 3. Push-In Rivets (Qty=10)



INSTRUCTIONS:

1. Remove all or portion of the plastic trim on the walls and floor around the wheel well area to allow Legend's Wheel Well Covers to fit in.

Note : The top and bottom flanges of the Legend Wheel Well Covers need to be in contact with metal of the van at all times. So, any flooring or wall liners from Legend need to be installed in the van after 'Step # 2'.



"Vehicle's bare metal in the wheel well area" This is view from inside the vehicle

2. Place the Driver side's and Passenger side's wheel well covers in the vehicle. Align the four holes present on the wheel well cover to the four holes highlighted in red, as shown in the pictures below.



"Positioning of Driver Side's WWC"



"Positioning of Passenger Side's WWC"

3. If also installing the Flooring and Wall Panels from Legend, follow the below points 'a' and 'b', if not, skip to 'Step # 4'.
 - a. Place the wheel well covers in position as shown in 'step # 2', and skip to the installation of floor and wall liner kits.
 - b. The Wheel Well Covers will be secured with Legend Wall Liner Kit's hardware, holding both the Wheel Well Covers and Wall Panels to the Vehicle.

Note :

- Wheel Well Cover's flanges/borders will always be hidden behind the flooring and wall panels.


4. Fasten each wheel well cover in place using four fasteners at the four holes present on each of the wheel well covers, as shown in the pictures below.

Note :

- The fastening point that is highlighted in red color below, may or may not be used depending on the type of holes configuration present of the vehicle's metal.



"Fastening of Driver Side's WWC"

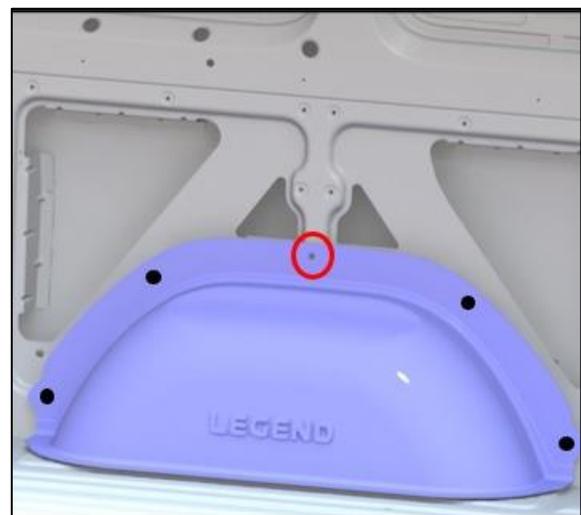

"Fastening of Passenger Side's WWC"