



**Van & Truck  
Cargo System**

Vantech USA www.vantech.com




#### PRODUCT INFO


Part #: H51003358W  
System: H1 Series  
Material: Steel  
Fitment: Utility with KUV Body  
Color: White

#### REQUIRED TOOLS

Power Tool With 5/16" Drill Bit

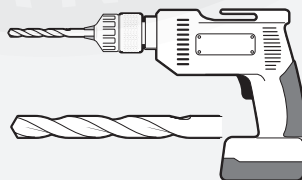

Power Tool With Phillips Head






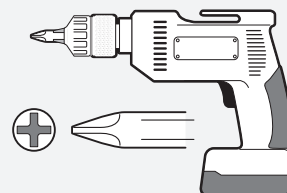


Marker








1/2" Wrench

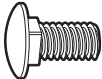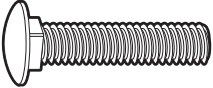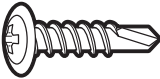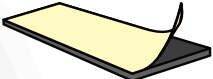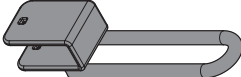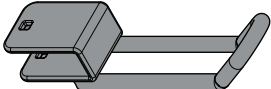

| PART #  | DESCRIPTION                                 | QTY | ITEM<br>ITEM NOT DRAWN TO SCALE                                                       |
|---------|---------------------------------------------|-----|---------------------------------------------------------------------------------------|
| B014    | 5/16" X 3/4" CARRIAGE BOLT                  | 12  |    |
| B018    | 5/16" X 1 3/4" CARRIAGE BOLT                | 12  |    |
| W008    | 5/16" X 3/4" WASHER                         | 24  |    |
| N005    | 5/16" NYLON NUT                             | 24  |    |
| B201    | 1/2" PHILLIP TAP SCREW                      | 12  |    |
| M04     | INTERIOR PLATE (5" B-B)                     | 6   |    |
| G308    | 1.5" X 8" GASKET                            | 6   |    |
| H04     | UPRIGHT MOUNTING BASE 9"                    | 6   |   |
| H41     | ANGLED ADAPTOR                              | 6   |  |
| A500-72 | 1" X 2" X 72" CROSS BAR                     | 3   |  |
| N016    | 5/16" PLASTIC KNOB                          | 4   |  |
| A02     | LADDER GUIDE                                | 2   |  |
| A06     | LADDER STOPPER                              | 2   |  |
| A69     | HOOK & LOOP STRAP                           | 2   |  |
| BG055   | PLASTIC BAR GUARD 55"<br>(CUT IF NECESSARY) | 3   |  |

## Hook & Loop Strap






## Directions

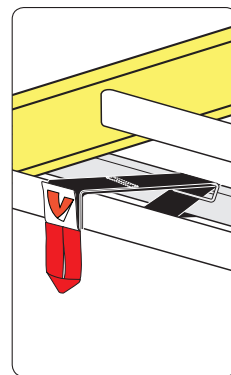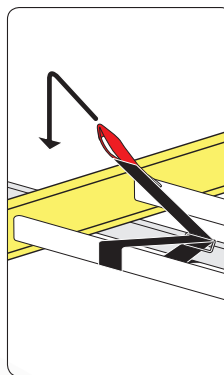
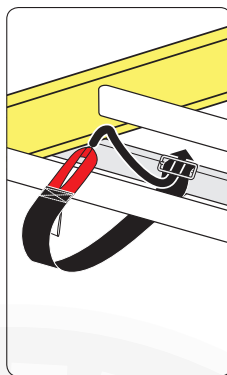
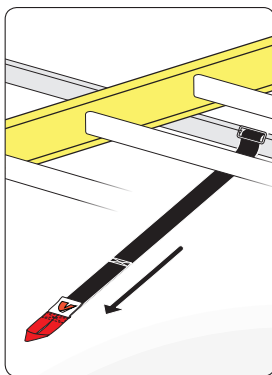
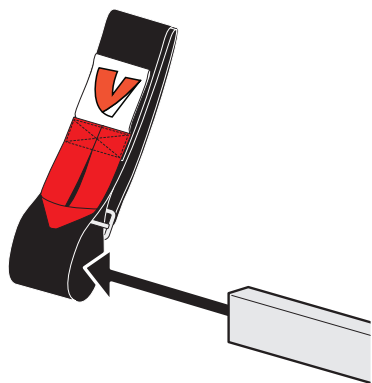


## PLASTIC BAR GUARDS FOR STEEL CROSS BARS

- Remove wax paper from plastic bar guard and adhere it to the top of the Cross Bar.

- Leave 4" on each end

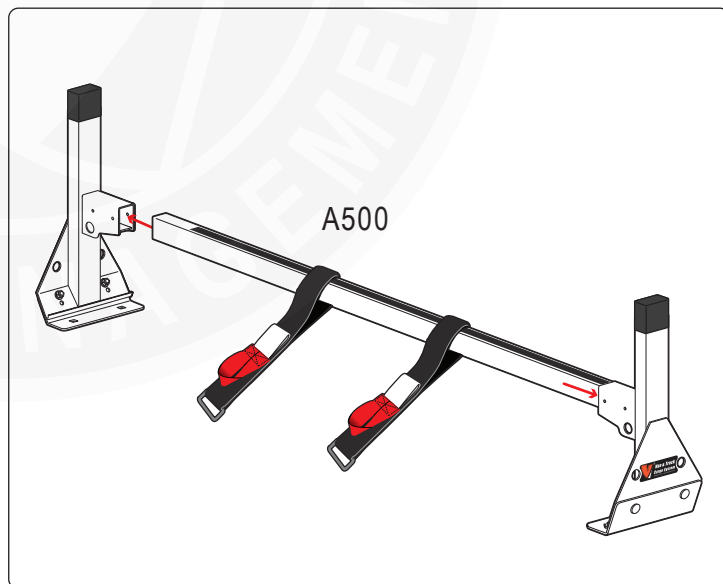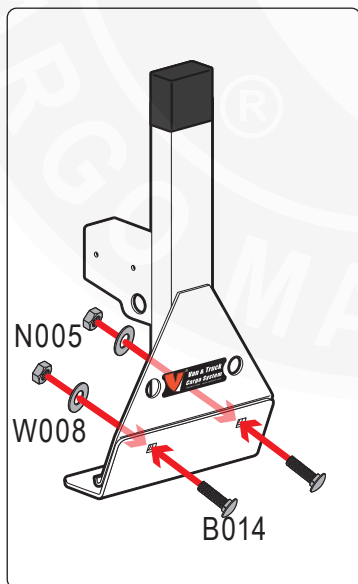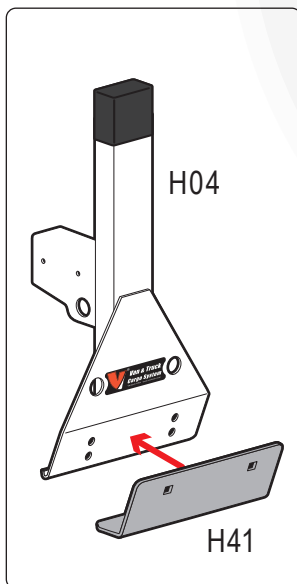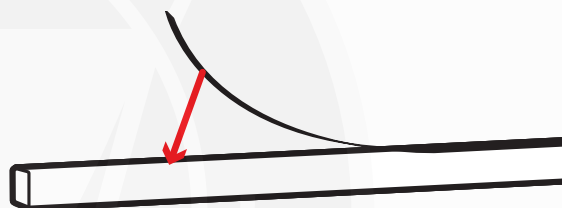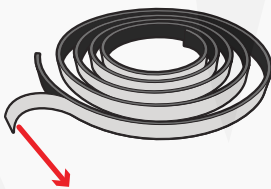

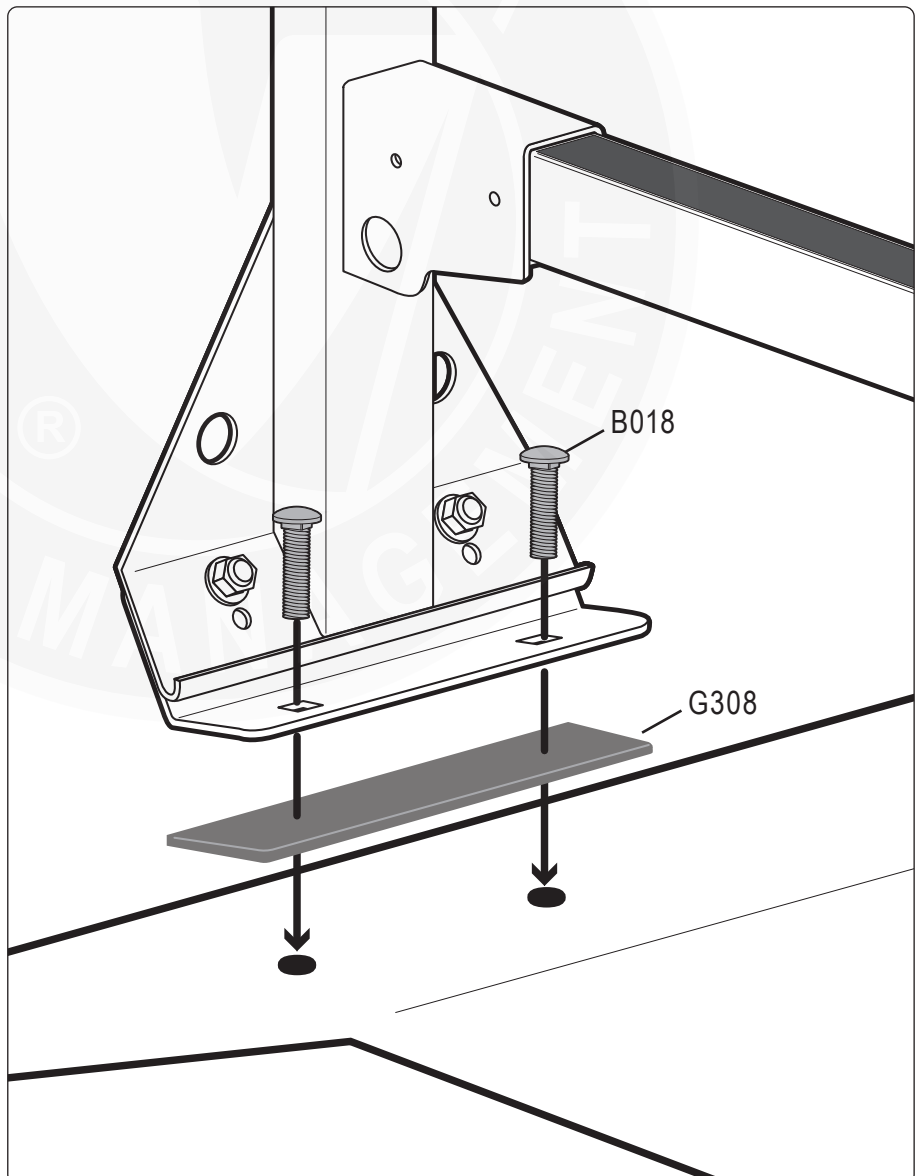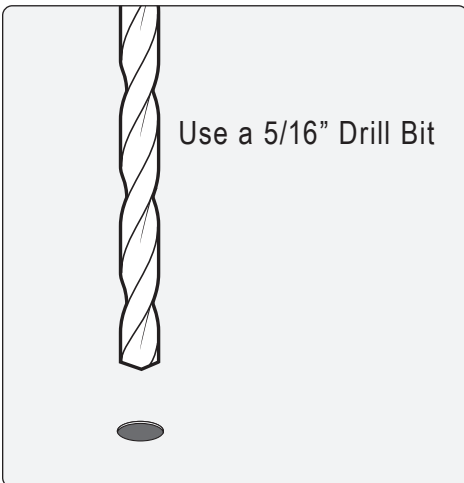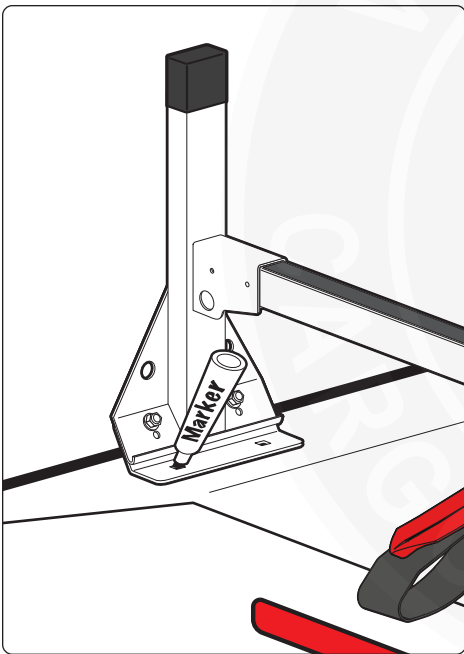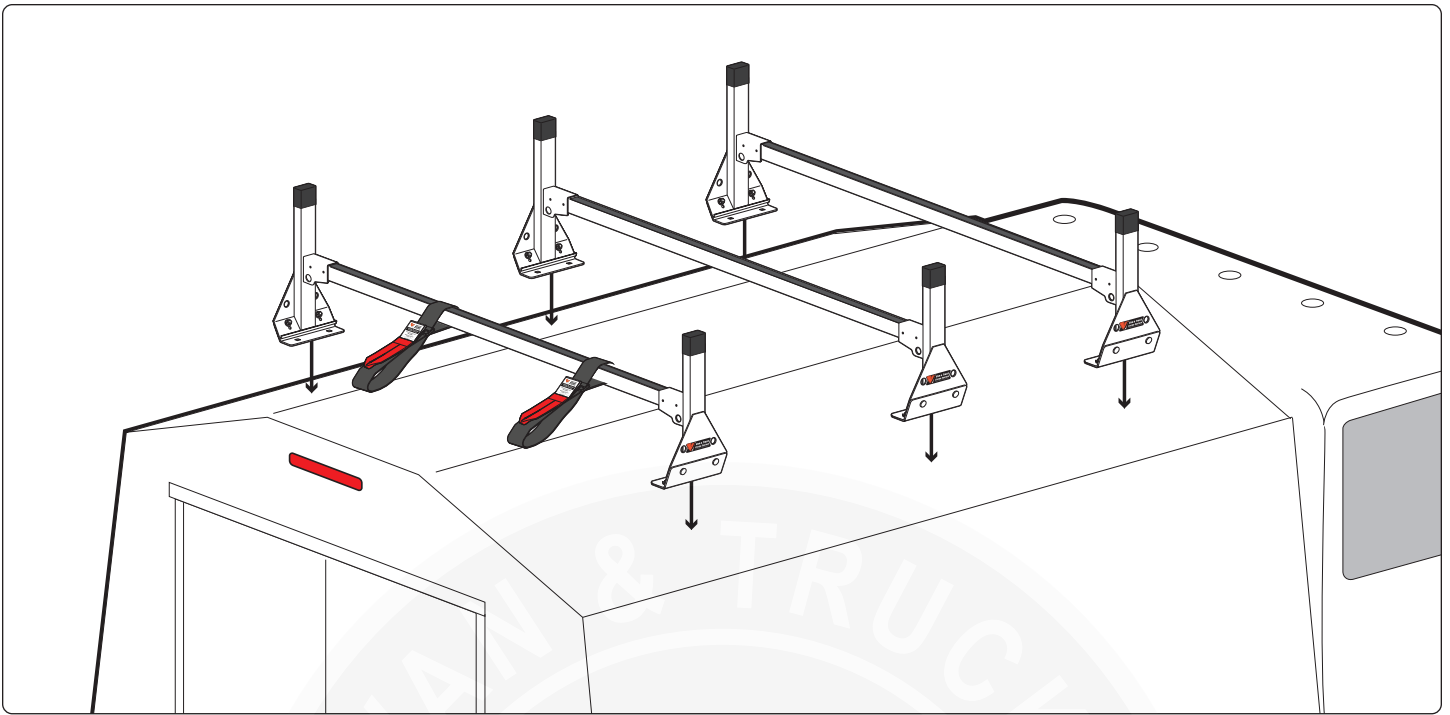

Secure from interior of van.  
Carriage bolt will prevent  
bolt from spinning

