



Van & Truck Cargo System

Vantech USA www.vantech.us




PRODUCT INFO

Part #: J2213W
System: J2000
Material: Aluminum
Fitment: Ford Transit Connect 2014-On
Color: White



















REQUIRED TOOLS

3/16" Allen Key Wrench




1/2" Wrench




PART #	DESCRIPTION	QTY	ITEM ITEM NOT DRAWN TO SCALE
S052	DOUBLE SLIDER 2" BOLT TO BOLT	6	
S062	DOUBLE SLIDER 1 3/8" BOLT TO BOLT	2	
W008	5/16" X 3/4" WASHER	48	
W022	5/16" LOCK WASHER	6	
B065	5/16" X 1" HEX BOLT	4	
B118	5/16" X 1 1/4" BUTTON HEAD ALLEN BOLT	12	
B068	5/16" X 1 3/4" HEX BOLT	6	
N002	5/16" NUT	6	
N005	5/16" NYLON NUT	20	
M11-2	MOUNTING BASE (LOW)	2	
M11	MOUNTING BASE (STANDARD)	4	
A286-55	3" X 1.5" X 55" CROSS BAR	3	
G203	RUBBER SEAT 2.75"	6	
BG555	RUBBER BAR GUARD 55"	3	
A03	SIDE SUPPORT	6	
A11	LADDER BASE	2	
A15	STOPPER	2	
A69	EZ-HOOK & LOOP STRAP	2	

Hook & Loop Strap


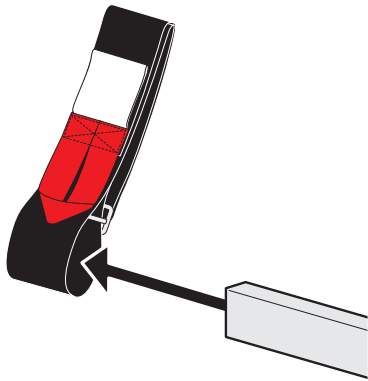


Directions

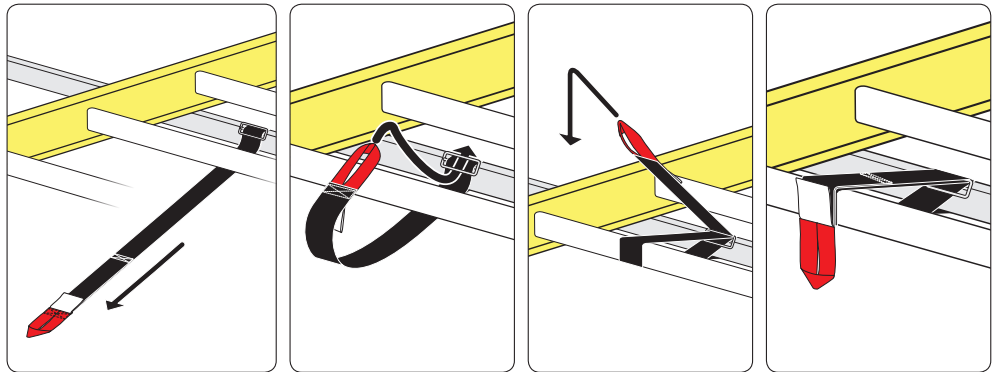



RUBBER BAR GUARD

- Press the rubber bar guard into the channels of cross bars

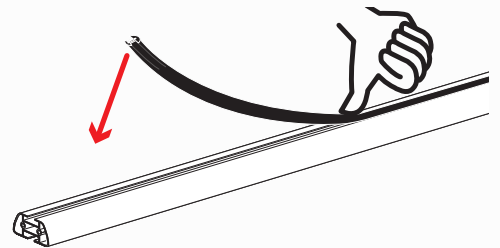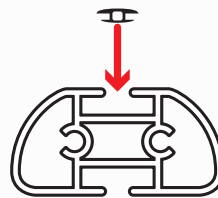

SYSTEM PLACEMENT MUST BE PLACED IN THIS ORDER

FRONT

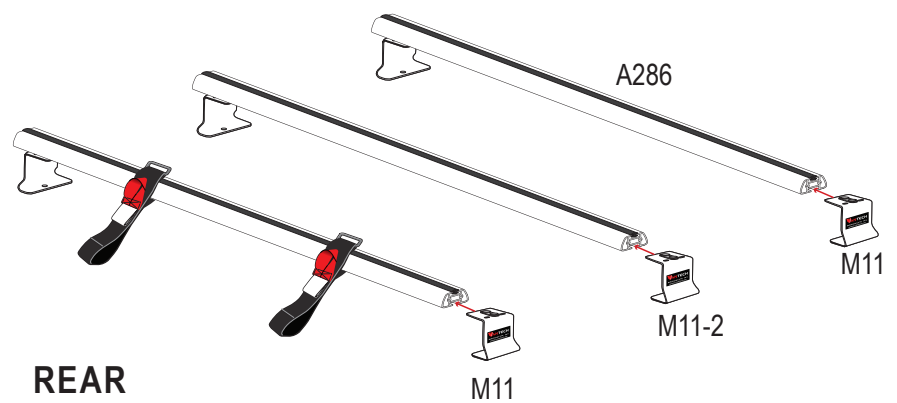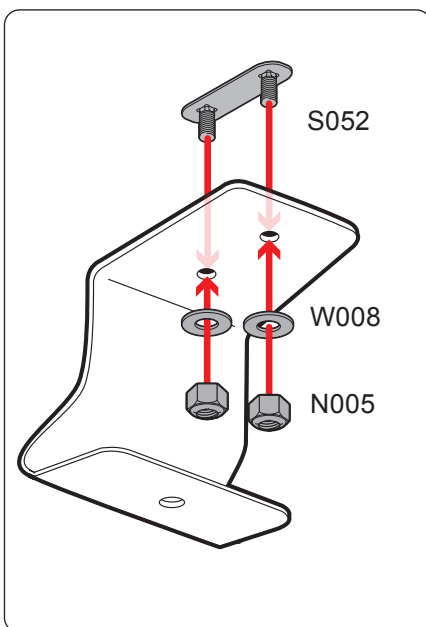

REAR

Do not tighten hardware

