




WelfitTM

Installation Instructions

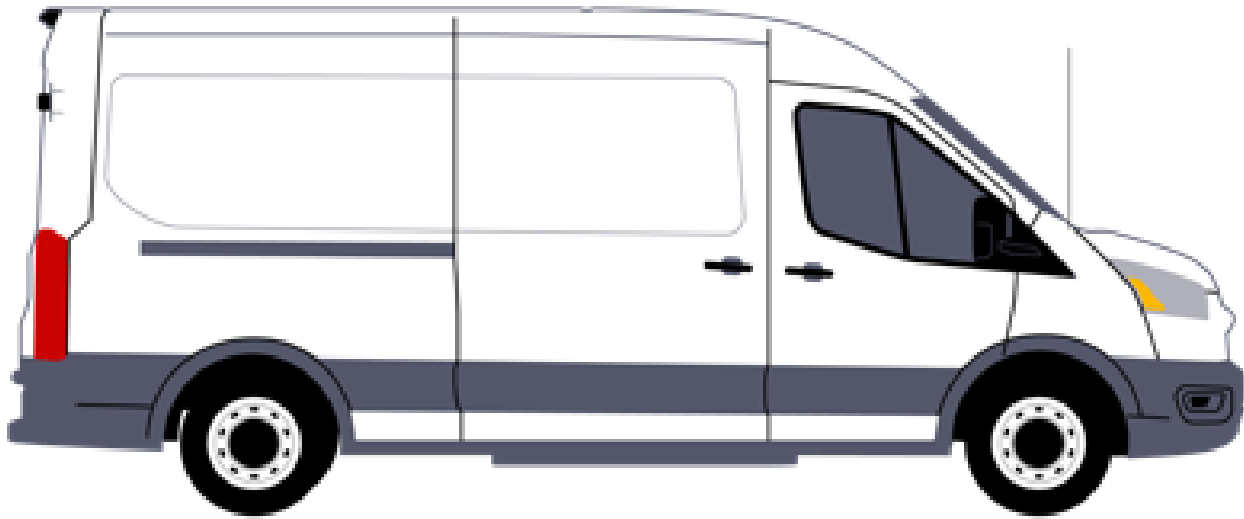

130" Low-Roof Parts List

Rear Driver Wall	Rear Passenger Door
Rear Passenger Wall	Front Roof
Front Driver Wall	Rear Roof
Sliding Door Upper	Front Floor
Sliding Door Lower	Rear Floor
Rear Driver Door	

130" Mid-Roof Parts List

Rear Driver Wall	Rear Driver Door
Rear Passenger Wall	Rear Passenger Door
Front Driver Wall	Front Roof
Sliding Door Upper	Rear Roof
Sliding Door Lower	Front Floor
	Rear Floor

*All parts listed under kits will come labeled

148" Low-Roof Parts List

Rear Driver Wall	Rear Passenger Door
Rear Passenger Wall	Front Roof
Front Driver Wall	Rear Roof
Sliding Door Upper	Front Floor
Sliding Door Lower	Middle Floor
Rear Driver Door	Rear Floor

148" Mid-Roof Parts List

Rear Driver Wall Upper	Rear Driver Door
Rear Driver Wall Lower	Rear Passenger Door
Rear Passenger Wall Upper	Front Roof
Rear Passenger Wall Lower	Rear Roof
Front Driver Wall	Front Floor
Sliding Door Upper	Middle Floor
Sliding Door Lower	Rear Floor

148" High-Roof Parts List

Rear Driver Wall Upper	Sliding Door Lower
Rear Driver Wall Lower	Rear Driver Door
Rear Passenger Wall Upper	Rear Passenger Door
Rear Passenger Wall Lower	Front Roof
Front Driver Wall Upper	Rear Roof
Front Driver Wall Lower	Front Floor
Over Sliding Door Wall	Middle Floor
Sliding Door Upper	Rear Floor

148" High-Roof Ext. Parts List

Rear Driver Wall Upper	Sliding Door Lower
Rear Driver Wall Lower	Rear Driver Door
Driver Upper Tray	Rear Passenger Door
Rear Passenger Wall Upper	Front Roof
Rear Passenger Wall Lower	Middle Roof
Front Driver Wall Upper	Rear Roof
Front Driver Wall Lower	Front Floor
Over Sliding Door Wall	Middle Floor
Sliding Door Upper	Rear Floor



Small Tree Clip
0.343" x 0.712"



PSA Tape
*PSA tape is used to
align and hold panel in place
until self-tapping screws are installed



Hardware Kit



Screws
8" x 0.1"

A close-up photograph showing a person's hand installing a black, textured floor panel into a white plastic frame. The hand is positioned on the left, with fingers gripping the edge of the panel. The panel is being pushed into a slot in the white frame. The background shows more of the white frame structure, which appears to be part of a vehicle or a large container. A green rectangular overlay is in the top right corner, containing the text "Floor Panels | Installation Instructions".

Floor Panels | Installation Instructions



Steps:



- Remove all OEM plastic trim, OEM tie-downs, and any other parts present on the vehicle's floor
- Align the front panel of the floor with the contour of the vehicle's metal floor
- Connect panels together using the H-Channel provided (shown above)
- Wait to install hardware (4) until all floor panels are installed



Steps:

- Connect panels together using the H-Channel provide (shown above) (*148's only)
- Insert hardware (4) into H-Channel just until snug
*DO NOT OVER TIGHTEN HARDWARE

Ceiling Panels | Installation Instructions





Steps:



- Align front ceiling panel and loosely install hardware (1)
- Align middle panel (148 High Roof Ext. only) at the edge of the front panel and loosely install hardware (1)
- Align the rear ceiling panel and loosely install hardware
- Push loosely installed hardware (1) in securely

*All panels install the same regardless of the chassis size

Wall Panels | Installation Instructions





Steps:

- Align driver front wall panel
- Install hardware (1) in holes provided



Steps:

- Align wheel well edge of the panel with the feature on the vehicle, position the edge of the panel to the vehicle wall
- Install hardware (1) in holes provided



Steps:

- Align rear driver wall upper panel
- Loosely install hardware (1) in holes provided
- Push hardware (1) in securely



Steps:

- Sliding door must be closed to install panel(s)
- Apply PSA tape (2) to panel
- Align panel with door and lock opening then push firmly
- Install small tree clips where OEM attachments points are available
- Install self-tapping screws (3) where necessary
*DO NOT OVER TIGHTEN

*PSA tape is used to align and hold panel in place until self-tapping screws are installed

Don't just upfit,
WelfitTM