Welfit™ | Installation Instructions

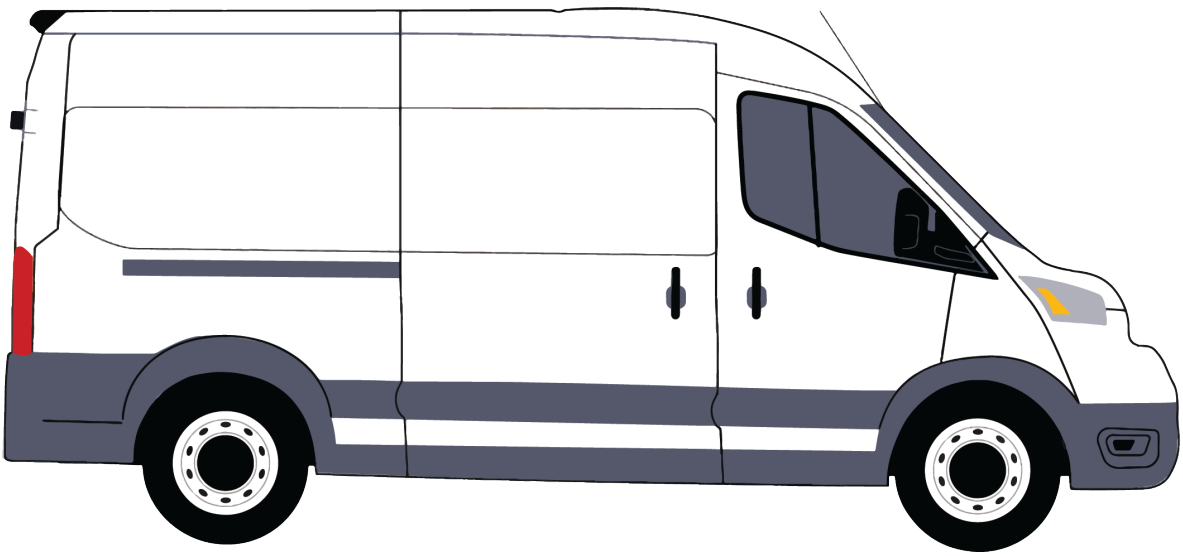

136" Low-Roof Parts List

- Rear Driver Wall
- Rear Passenger Wall
- Front Driver Wall
- Sliding Door
- Driver Barn Door
- Passenger Barn Door
- Front Roof
- Rear Roof
- Front Floor
- Rear Floor

136" High-Roof Parts List

- Rear Driver Wall
- Rear Passenger Wall
- Front Driver Wall
- Sliding Door
- Driver Barn Door
- Passenger Barn Door
- Front Roof
- Rear Roof
- Front Floor
- Rear Floor

*All parts listed under kits will come labeled

159" High-Roof Parts List

- Front Driver Wall
- Rear Driver Wall Upper
- Rear Driver Wall Lower
- Rear Passenger Wall Upper
- Rear Passenger Wall Lower
- Sliding Door
- Rear Driver Door
- Rear Passenger Door
- Front Roof
- Rear Roof
- Front Floor
- Middle Floor
- Rear Floor

159" High-Roof EXT. Parts List

- Front Driver Wall
- Rear Driver Wall Upper
- Rear Driver Wall Lower
- Rear Passenger Wall Upper
- Rear Passenger Wall Lower
- Sliding Door
- Rear Driver Door
- Rear Passenger Door
- Front Roof
- Rear Roof
- Front Floor
- Middle Floor
- Rear Floor EXT.

*All parts listed under kits will come labeled

Tools & Hardware

1

Small Tree Clip
0.343" x 0.712"

2

PSA Tape
*PSA tape is used to
align and hold panel in place
until self-tapping screws are installed

3

Hardware Kit

4

Screws
8” x 0.1”

5

Large Tree Clips
.492” x .622”
*requires mallet

Floor Panels | Installation Instructions

Steps:

- Remove all OEM plastic trim, OEM D-Rings/tie-downs, and any other parts present on the vehicle's floor
- Align the front contour of the floor with the contour of the vehicle's metal floor
- Connect panels together using the H-Channel provided (shown above)
- Wait to install hardware (4) until all floor panels are installed

*If reusing D-Rings, longer bolts will be needed (not provided)

Steps:

- Connect panels together using the H-Channel provided (shown above)
- Insert hardware (4) into H-Channel just until snug, reinstall D-Rings in the vehicle with longer bolts
- Remember to tighten all hardware (4) until it is snug
  *DO NOT OVER TIGHTEN HARDWARE

*If reusing D-Rings, longer bolts will be needed (not provided)

Ceiling Panels | Installation Instructions

Steps:

- Align front ceiling panel and loosely install tree clips (1)
- Align rear panel at the edge of the front panel and loosely install tree clips (1)
- Push loosely installed hardware (1) in securely

Note: All panels install the same regardless of the size

Wall Panels | Installation Instructions

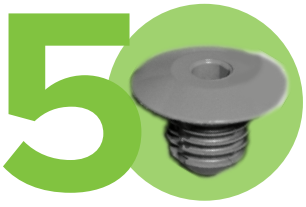

Steps:

- Align panel with feature on vehicle driver side front then align opposite side of panel
- Loosely insert hardware (1 and 5) in holes provided
- Push loosely installed hardware (1) in securely
- Carefully use rubber mallet to securely install hardware (5)

Note: Large tree clips install in larger holes in chassis wall
Small tree clips install in smaller holes in chassis wall

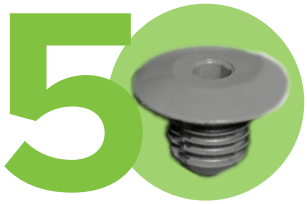

Steps:

- Align wheel well edge of the panel with the feature on the vehicle, position the edge of the panel to the vehicle wall
- Install hardware (1 and 5) in holes provided
- Carefully use rubber mallet to securely install hardware (5)

Note: Large tree clips install in larger holes in chassis wall
Small tree clips install in smaller holes in chassis wall

WRONG CONTENT NEED UPPER REAR WALL COPY

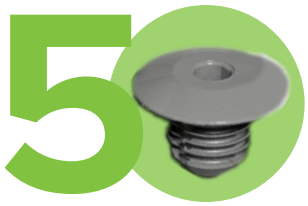

Steps:

- Align edge of the panel with the feature on the vehicle, position the edge of the panel to the vehicle wall
- Loosely insert hardware (1 & 5) in holes provided
- Push loosely installed hardware (1) in securel
- Carefully use rubber mallet to securely install hardware (5)

Note: Large tree clips install in larger holes in chassis wall
Small tree clips install in smaller holes in chassis wall

Door Panels | Installation Instructions

Steps:

- Sliding door must be closed to install panel
- Apply PSA tape (2) to hold panel in place
- Align panel with door and lock opening, then push firmly
- Loosely install hardware (1) in holes provided on top of the panel first
- Install self-tapping screws (3) where necessary
  *DO NOT OVER TIGHTEN HARDWARE
- Push loosely installed hardware (1) in securely

Note: PSA tape is used to align and hold panel in place until self-tapping screws are installed

Steps:

- Sliding door must be closed to install panel(s)
- Apply PSA tape (2) to hold panel in place
- Align the holes on panel if provided with the holes located on the vehicle's door
- Install self-tapping screws (3)
- Remember to not over tighten hardware

Note: PSA tape is used to align and hold panel in place until self-tapping screws are installed

Don’t just upfit,
Welfit™